




KB850-KD Diner High Chair Assembly Instructions

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Please Note: This product is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15 kg. This product is designed to be used by an infant or child capable of sitting upright and unassisted. Waist restraint strap should be buckled at all times when in use.

Restraint Usage: To fasten the waist strap, push spring tabs into the buckle receptacle until both lock in place with an audible “click”.

 The waist restraint can be adjusted to make the strap tighter or looser.

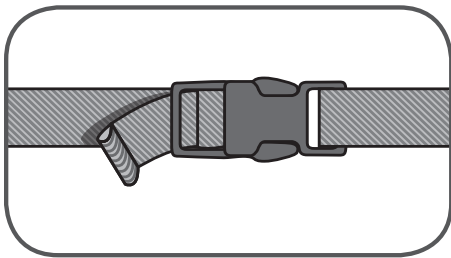

WARNING:

Prevent serious injury or death from falls or sliding out. Do not leave child unattended.

Always use the restraint system. Make sure harness is correctly fitted to child before use.

The child should be secured in the high chair at all times by the restraining system.

Always keep child in view while in the high chair. Never leave the child unattended.

It is recommended that the high chair be used only by children capable of sitting upright unassisted.

Do not use the high chair unless all components are correctly fitted and adjusted. Do not use high chair if any part is broken, torn or missing.

Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc. in the vicinity of the high chair.

FALLING HAZARD: Prevent your child from climbing on the product.

You are responsible for the safe operation of this unit.

Inspection Criteria - A properly maintained unit:

- Has both ends of a functioning, non-frayed strap: buckle clicks when closed and is attached at both ends on seat bottom.
- Has an intact warning label affixed to the seat back. (If damaged or unreadable, please replace.)
- All plastic parts firmly attached by provided hardware, and should be tightened as necessary.

Maintenance: Clean and sanitize regularly. Wipe down The Diner High Chair with a soft rag using a non-abrasive cleaner.

Important: DO NOT USE BLEACH on this product. May cause discoloration. Use of bleach on this product will void warranty. Do not use abrasive cleaners as they can scratch the product.



KB850-KD Diner High Chair Assembly Instructions

KB850 Package Contents

Left and Right Legs

Front and Rear Support Bars

T-Bar

Seat Base (with strap)

Seat Back (with labels)

¼-20 x 1¼" Bolts (8 pc)

¼-20 x 1¾" Bolts (4 pc)

 
(Used for attaching the seat ONLY)

Plastic Washers (12 pc)

Bolt Covers (12 pc)

Tools Needed

Phillips Head Screwdriver

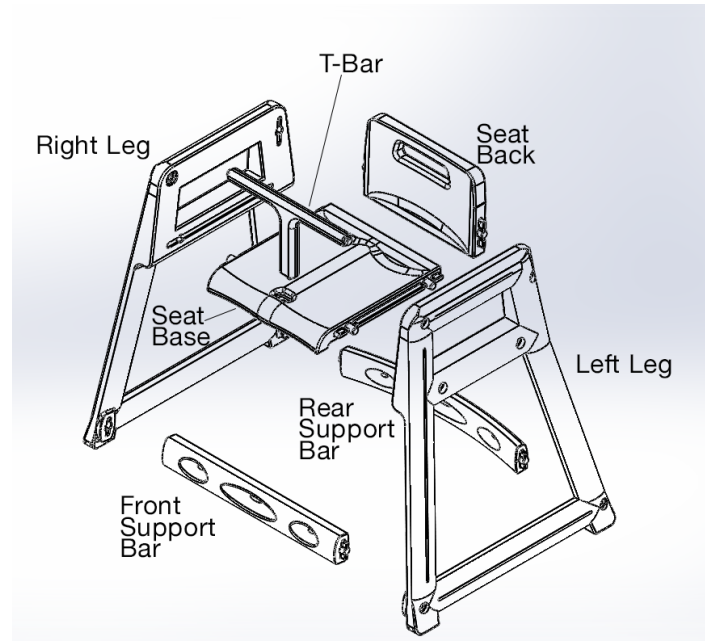

Assembly Instructions

Step 1. Thread one plastic washer on each of the bolts. The bolt head should sit within the “petals” of the plastic washer. Separate the 1¼” bolts with washers from the 1¾” bolts with washers.

Step 2. Assemble the t-bar and seat base by inserting bottom of t-bar into the recess on the seat surface.

Step 3. Attach the seat base and t-bar to the right leg using 1¾” bolts for the seat base and the 1¼” bolt for the t-bar.

Step 4. Using the 1¼” bolts, attach the front and rear support bars to the right leg. The textured side of the bars should be facing out and the small holes facing the floor.

Step 5. Attach the seat back to the right leg using the 1¼” bolts. Label should be facing outward (away from the t-bar).

Step 6. Lay the partially assembled chair on the right leg so that the components are facing up and place the left leg on top. Attach the seat to the left leg using the 1¾” bolts.

Step 7. Attach the remaining pieces to the left leg using the 1¼” bolts.

Step 8. Double check that all bolts are tight. Snap bolt covers on all exposed bolt heads.

Check and tighten all connections

Do not overtighten