

KOALA KARE PRODUCTS

Inspection and Operation Instructions

KB115 Infant Seat Kradle (ISKM)



Please Note: This product is designed to hold an infant secured in a standard car seat and then strapped into the ISKM. Straps should be buckled at all times when in use. To minimize damage, straps should be buckled before closing and storing.

Maintenance: Metal frame should be cleaned with a soft rag. Mesh netting is removable and machine washable. Wash in cold water and air dry.

IMPORTANT. RETAIN FOR FUTURE REFERENCE. READ CAREFULLY.
IMPORTANTE. GUÁRDELO PARA FUTURAS CONSULTAS. LEER ATENTAMENTE.
IMPORTANT. À CONSERVER POUR INFORMATION. À LIRE ATTENTIVEMENT.
WICHTIG. ZUR SPÄTEREN BEZUGNAHME AUFBEWAHREN. BITTE SORGFÄLTIG DURCHLESEN.



Step 1.

Open the ISKM unit.

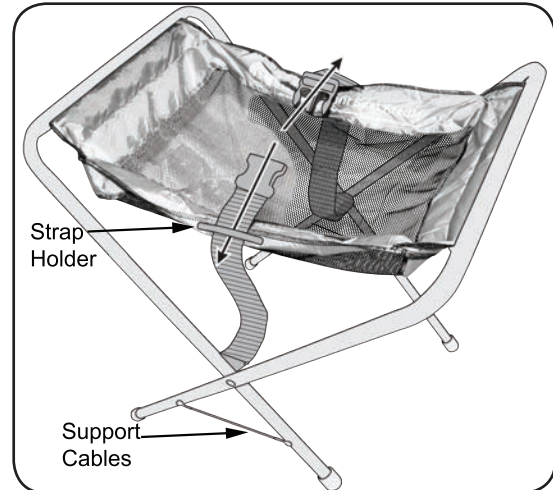
Step 2.

At the base of the unit, there are two support cables located on each side. Check that both wires are securely fastened to the metal frame.

If the cable(s) are broken, please contact Koala Kare Products Customer Service.

Step 3.

Ensure the strap feeds through the strap holders on both sides. Straps should remain in the strap holders when the ISKM is folded and/or not in use.

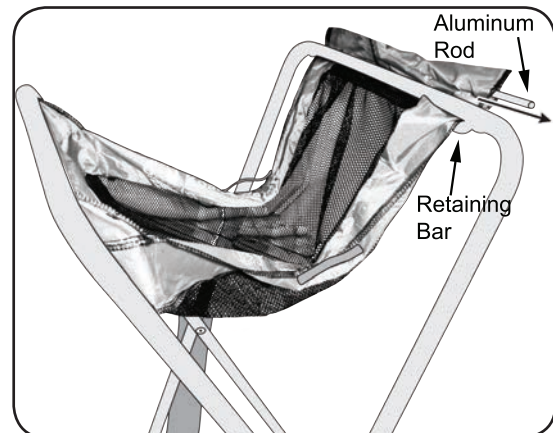
**Step 4.**

Check buckle to ensure it opens and closes properly. You will hear an audible click indicating buckle is securely closed.

If the buckle is broken, please contact Koala Customer Service to order a replacement strap.

Step 5.

The nylon mesh secures to the frame by two aluminum rods. The rods slide inside each end of the mesh and fit snugly against the retaining bar on the metal frame.

**Step 7.**

Place both hands inside netting at either end. Apply downward pressure to ensure netting is secure. Look for tears and/or seam separation.

If rods or mesh are damaged, please call Koala Customer Service for a replacement mesh kit (rods are included).

